



Tiger Cycle Lane Separator

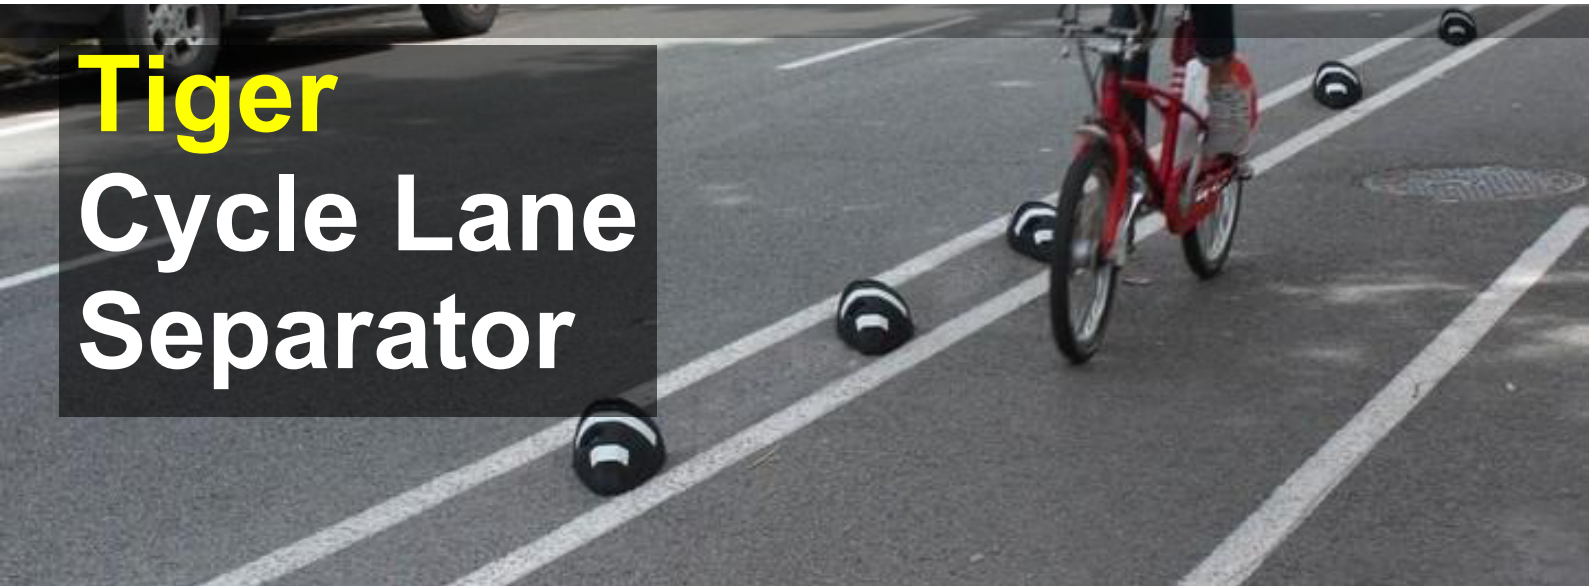


INSTALLATION INSTRUCTIONS

Steps

- Place the Tiger Base Unit (or Fixing Template) in the required location and drill a hole with a $\varnothing 14\text{mm}$ drill to the depth indicated for each fixing (refer to images below). **Ensure correct orientation of Tiger**
- Remove the Tiger Base Unit (or Template) and clean the holes removing any residue.
- Fill approximately 2/3rd's of the hole with Anchor Resin or similar approved).
- Push the threaded rod with nut attached through the 3 fixing holes in the Tiger Base Unit.
- Offer the Unit with the rods loosely attached to the ground surface holes and push rods down the holes and through the resin fully.
- Wait for the resin to dry and tighten the Tiger Base Unit nuts securely.

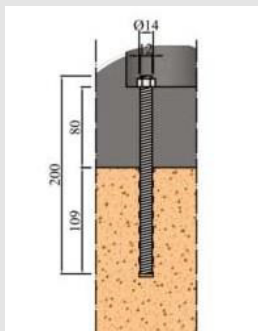

Fixings in the center of the Base Unit

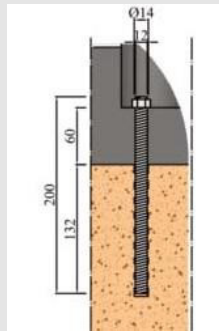

Fixings at the ends of the Base Unit




Anchor Resin
Zinc Plated M12
 rod and nut



Anchor Resin
 x 300ml



Positioning options

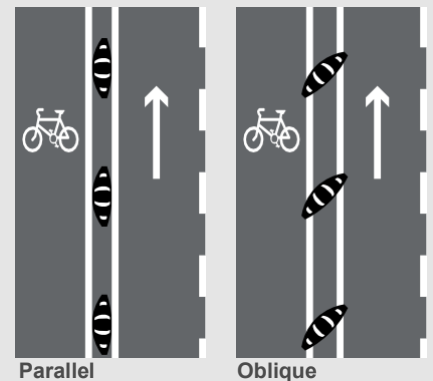

ENSURE CORRECT ORIENTATION

**CYCLE LANE
 SIDE**



**ROAD
 SIDE**

